



PRECISION RIFLE SUPPRESSOR SHIELD (PRSS) INSTALLATION INSTRUCTIONS

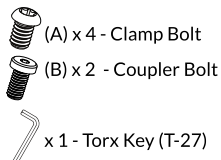

(C) x 1 - Male Coupler w/ Suppressor Shield
(D) x 1 - Female Coupler
(E) x 1 - Bottom Barrel Clamp
(F) x 1 - Top Barrel Clamp

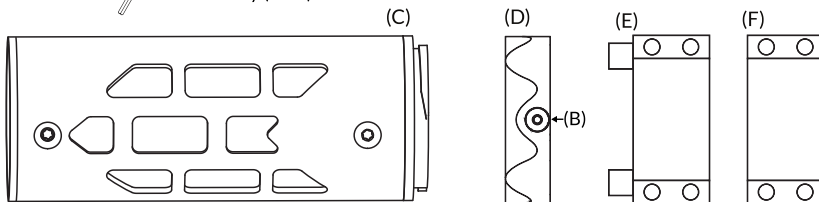


*The PRSS Barrel Clamp assembly ships fully assembled without threadlocker.

WARNING: UNLOAD WEAPON & POINT IN SAFE DIRECTION



SCAN FOR VIDEO
INSTRUCTIONS

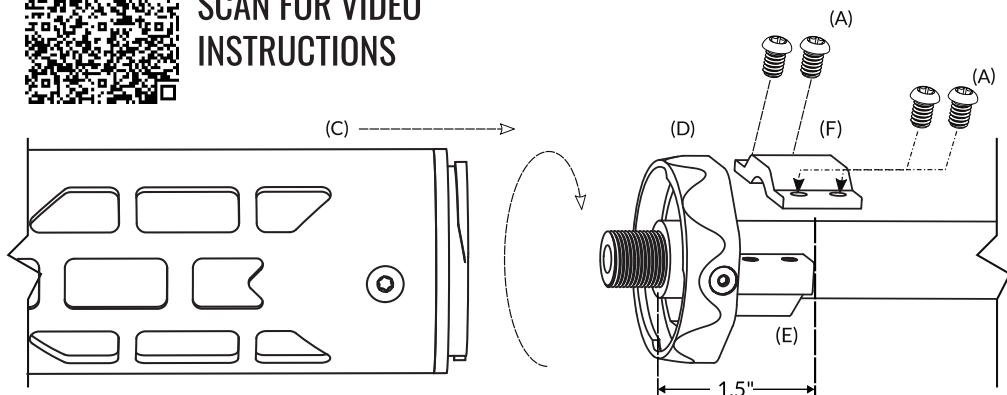

1. Remove suppressor and disassemble Top Barrel Clamp(F) from Female Coupler/Bottom Barrel Clamp assembly(D/E).
2. Slide Female Coupler/Bottom Barrel Clamp Assembly(D/E) over muzzle, oriented as shown. May require disassembly of Bottom Barrel Clamp(E) from Female Coupler(D).
3. Align rear of Top Barrel Clamp(F) approx. 1.5" behind barrel shoulder/muzzle device, apply thread locker and install 4 screws(A) finger tight. Apply thread locker to Coupler Bolts(B) and torque to 30 In-LBs.
4. Install suppressor and Male Coupler(C).
5. Level Suppressor Shield assembly, align front edge of Shield to front of suppressor, and tighten 4 screws(A) to 25-30 In-LBs, incrementally and evenly, in an X pattern.

*Gaps between Top/Bottom Clamp should be even on both sides of Barrel Clamp.

6. Check for secure fit.

CAUTION: Blast diverters, exposed baffles, or compensators should be exposed and forward of Suppressor Shield. Covering these devices will void the warranty of your Suppressor Shield.