




# U-RAC SUPPRESSOR SHIELD INSTALLATION INSTRUCTIONS

- (A) x 1 Picatinny Cross Bolt
- (B) x 1 - Cross Bolt Nut
- (C) x 1 - Male Coupler w/ Suppressor Shield
- (D) x 1 - Female Coupler
- (E) x 1 - Picatinny Rail Grabber

 x 1 - Allen Key (9/64")


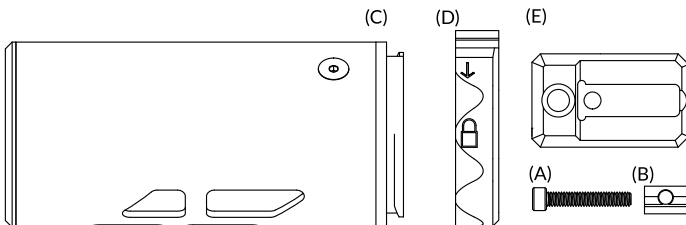


**WARNING: UNLOAD WEAPON & POINT IN SAFE DIRECTION**



SCAN FOR  
INSTRUCTIONS

Optional Unity Tactical™ Fusion™  
Backup Iron Sight - Folding

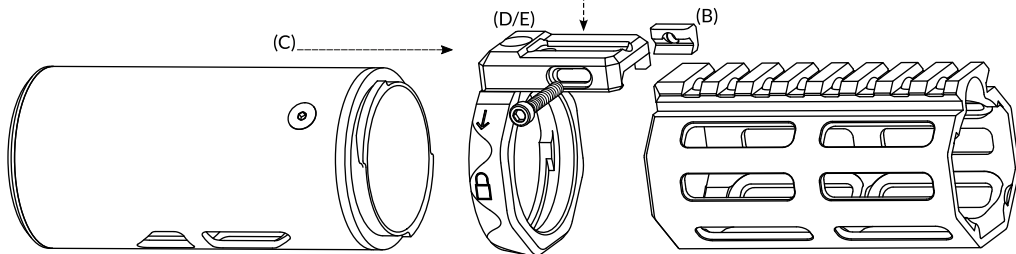

Assemble without thread locker and finger tight initially. For final assembly, apply thread locker and torque all screws to 25 IN-LBs.

1. Remove suppressor.
2. Separate Female Coupler(D) and Male Coupler(C). \*Rotate opposite locking markings
3. Slide Rail Grabber/Female Coupler assembly(D/E) onto top picatinny rail.
4. Insert Cross Bolt(A) through Rail Grabber(E) and picatinny rail and install Cross Bolt Nut(B) finger tight.
5. Hold Female Coupler assembly(D/E) tight against handguard, tighten Cross Bolt(A) to 25 IN-LBs.
6. Install suppressor.
7. Install Suppressor Shield.
  - a. Align index markings of Male Coupler(C) and Female Coupler assembly(D/E).
  - b. Rotate in direction of locking arrow until index arrow points to lock icon.
8. Check for secure fit.

Coupler assembly should be cleaned of carbon and oiled/greased with general weapons maintenance.

**CAUTION: Blast diverters, exposed baffles, or compensators should be exposed and forward of Suppressor Shield. Covering these devices will void the warranty of your Suppressor Shield.**